

ERB25-0.7/34
BATTERY POWERED ROLLER SHADE MOTOR
PROGRAMMING INSTRUCTIONS

STEP 1:

- A. Charge battery powered shade with A/C Adapter until light on charger turns green



STEP 2:

PAIR REMOTE CONTROL WITH MOTOR

- A. Set Remote Control to Channel 1
B. Press and hold both "P" on shade motor and "C" on remote until shade Jogs.



NOTE: Motor is now in Program Mode



STEP 3:

SETTING LOWER LIMIT

- A. Hold "L" on Remote Control until shade Jogs
B. Lower shade with remote control until lower stopping point is reached.
C. Press "C" on remote control until shade Jogs



Note: Lower Limit is now set

STEP 4:

SETTING UPPER LIMIT

- A. Raise shade with remote control until upper stopping point is reached
B. Press "C" on remote control until shade Jogs

Note: Upper Limit is now set



Note: If desired stopping point is not achieved during programming, toggle up or down in small increments to fine tune desired stopping point before pressing "C"