

ES2512D-0.7/34
MOTORIZED ROLLER SHADE PROGRAMMING INSTRUCTIONS

(IGNITION OFF)

STEP 1:
PUT MOTOR INTO PROGRAM MODE

- A. Hold learning wire button and Up/Down switch until 3 beeps are audible

NOTE: Motor is now in Program Mode



STEP 2:
SETTING LOWER LIMIT

- A. Push "Down" toggle and lower shade until lower stopping point is reached
B. Reverse direction on toggle to "Up" 3 beeps are audible

Note: Lower Limit is now set



STEP 3:
SETTING UPPER LIMIT

- A. Push "Up" toggle until desired stopping point is reached
B. Reverse toggle, 3 beeps are audible

Note: Lower Limit is now set



FOR IGNITION "ON" VISOR SETTING, TURN ON IGNITION AND FOLLOW PROGRAMMING INSTRUCTIONS ABOVE